


## NonMedErect is Easy to Place on the Body

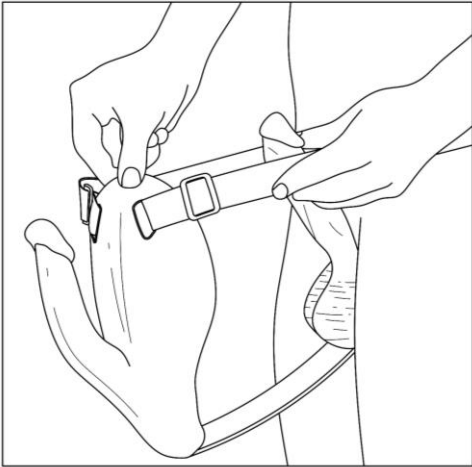

### Step One

Step into the loosely adjusted harness and hold the top of the prosthesis.


### Step Two

While holding the prosthesis in one hand, use the opposite hand to place the penis in the upper cavity. The testicles will naturally position into the lower cavity. *All straps removed for clarity*



### Step Three

Adjust waist straps alternately to get a secure and comfortable fit around the waist. Lastly, adjust the center strap to secure the bottom against the body. Tuck excess straps into back pad or let hang.

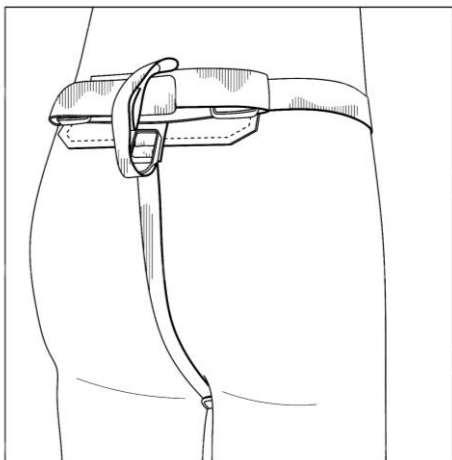

**Simply loosen the waist strap buckles and the NonMedErect will fall freely to the ground**